


困ったら、F7キーで
止まってもらおう！

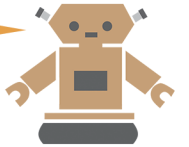

OUT0
止まる



前へ

OUT33



OUT18

後ろへ



左(速く)

OUT34



左(ゆっくり)

OUT32



右(ゆっくり)

OUT1



右(速く)

OUT17


PWM3,50

左うで

★うでの仕組み

右の数字を変えると
うでの角度が変わるよ！


50 (前に90度)

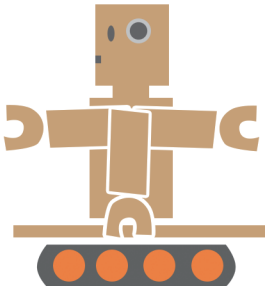

145(0度)

240 (後ろに90度)

50 (後ろに90度)

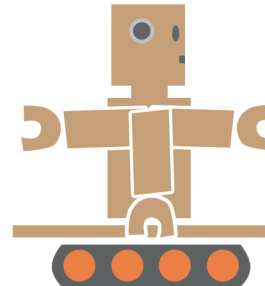


145(0度)

PWM4,240

右うで

50 (後ろに90度)

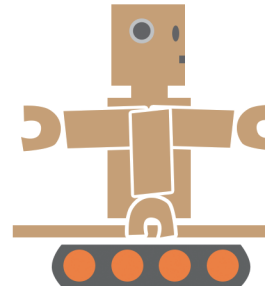

145(0度)

240 (前に90度)